


## Mp3 PLAYER / BLUETOOTH RECEIVER



# Contents

1. PLAYER	2
2. REMOTE CONTROLLER	3

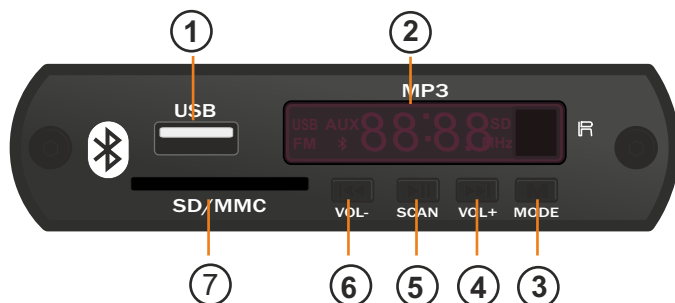

**1** USB memory stick socket

**2** The display

**3** MODE - source selection (USB, SD / MMC, Bluetooth). If there is no media in the USB or SD / MMC slots, the player automatically switches to Bluetooth mode.

When USB flash drive or memory card is placed into the slot the player switches to the PAUSE mode. Starting the playback requires the PLAY button to be pressed.


The USB flash drive will take priority over the memory card. When a storage medium is inserted during operation, it will be automatically selected.

**4** Jump to the next track - the player goes to the next track and playbacks it . Press and hold the button down in order to decrease the volume.

**5** PLAY/PAUSE button

**6** Jump to the previous track - the player goes to the previous track and playbacks it . Press and hold the button down in order to decrease the volume.

**7** SD/MMC card socket.

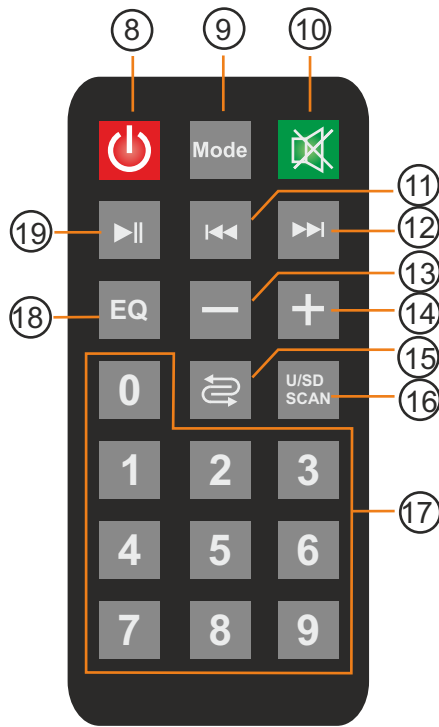

**8** Turn On/Off the player

**9** MODE - source selection (USB, SD / MMC, Bluetooth). If there is no media in the USB or SD / MMC slots, the player will automatically switch to Bluetooth mode.

**10** MUTE - mute On/Off

**11** Back to the previous track. The player goes to the previous track and playbacks it .

**12** Skip to the next track. The player goes to the next track and playbacks it .

**13** Volume -

**14** Volume +

**15** Repeat mode:

- NOR - repeat mode disable

- 1ST (1andSTOP) - one, selected track will be played and then the player switches to the PAUSE mode (playback stops)

- ONE - one, selected track will be

repeated continuously

- ALL - all tracks from the media will be

repeated at once

**16** Source selection (USB / SD / MMC)

**17** Numerical keys. Press an appropriate file number in order to play it directly. The player switches to the PAUSE mode (the playback stops). Press play in order to resume the playback.

**18** EQ - predefined equalizer settings: POP, ROCK, JAZ, CLASIC, CUT. NO EQ turns off the adjustment.

**19** PLAY/PAUSE button.

